



PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To ensure safety and avoid damage, only licensed electricians should perform installation and maintenance.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- Use only UL approved wire input/output connections. Minimum size 18AWG or 14 AWG if there are any continous runs.
- If the fixtures are connected in a continous run, do not exceed allowable number of fixtures in series/power in continous runs.
- Inrush currents must be taken into account by the electricans to account for proper circuit design.
- Do not install lighting system in a wet location.
- Ensure the appropriate connectors match the luminaire.
- Do not install any luminaire assembly no closer than 5 inches away from any window treatments. i.e curtain, blinds, or any similar combustible type material.
- Clean the refractor/lens as needed, based on dirt exposure and desired light output. Use warm water with a mild, non-abrasive detergent. Rinse thoroughly and wipe dry. If internal cleaning is required, clean the refractor/lens the same way and replace any damaged gaskets.

WARNING: Continous Run Maximum 7 Units



