



WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage, only licensed electricians should install.
- To avoid electric shock or component damage, disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing..
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- This device is not intended for use with emergency exits.
- Suitable for damp locations
- **CAUTION:** Connect fixture to a 120VAC, 60Hz power source only. Any other connection void the warranty.

Installation

1. Turn off power at the circuit breaker or electrical box before starting installation.
2. Remove luminaire and accessories packet from the carton.
3. Remove the plastic lens by rotating it free from the mounting plate. Fig.1
4. Thread the provide mounting screws onto the junction box mounting holes, and partially tighten screws. Fig.2
5. Pull the power supply wires out form the junction box. Using the wire nuts, connect the black supply wire (hot) to black luminaire wire, the white supply wire (neutral) to the white luminaire wire, and the supply ground wire to the green luminaire wire. Wrap all wire connection with electrical tape fo a secure connection.
6. After all wired connection are secure, install the metal luminaire housing to the junction box by sliding the housing keyhole slots over the mounting screws. Rotate the luminaire housing clockwise until the screw slide into the narrow end of the keyhole slots. Securly tighten the mounting screws. Fig.4
7. Select the color temperature you desire, and set the code switch to the corresponding color temperature position. Fig.3
8. Attach the plastic lens to the luminaire housing by rotating the lens until the lens is securely in place Fig.5
9. Turn on the power and switch on the luminaire. Everything should appear in working order and flush to the ceiling.

For non-sure replace light source: "the light source contained in this luminaire shall only be replace by the manufacturer or the service agent.

Fig.1

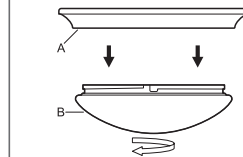


Fig.2


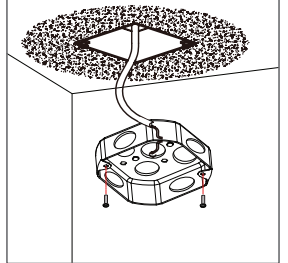


Fig.3

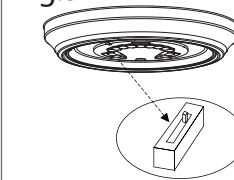

According to the demand, set the code switch to the corresponding color temperature position.

Fig.4

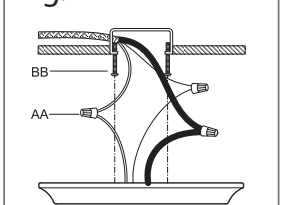


Fig.5

