

WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage, only licensed electricians should install.
- To avoid electric shock or component damage, disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- This device is not intended for use with emergency exits.
- Suitable for indoor use only, non water-proof.
- **CAUTION:** Connect fixture to a 120 Volt, 60Hz power source only. Any other connection void the warranty.

The product package includes the following components:

1. Mounting Bracket (1pc)
2. Diffuser and housing (shipped as part of lamp) (1pc)
3. Wirenuts (in parts bag) (3pc)
4. 1 ½" Electrical Screws (in parts bag) (2pc)
5. Installation Manual (1pc)

Installation

1. Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.
2. Turn off power at the circuit breaker or electrical box before starting installation.
3. Remove the PC housing for the lamp body by sliding it upwards (Fig. 1). Place PC housing in safe location.
4. Install the mounting bracket to the junction box by screwing in the electrical box screws provided. Do not screw all the way. (Fig. 2).
5. Connect the black and the white wires of the fixture with two wires of the same colors from the junction box with the wirecaps. Connect the grounding wire of the fixture with the one from the junction box with the wirecap (Fig. 3).
6. Push the wiring into the junction box and align the fixture plate with the electrical screw shown in Fig. 2, then rotate fixture plate clockwise and lock it in place by finish screwing in the electrical screws. (Fig. 4).
7. Ensure that the lamp body is tightly flush to the mounting plate.
8. Replace the PC Housing by sliding it back into place (Fig. 5).
9. Check to ensure the PC housing and Lamp Body are securely on (Fig 6).
10. Restore power to the electrical box. Turn the light switch on to activate the fixture.

