


! WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- The device is not intended for use with emergency exit.
- Suitable for wet location.
- Indoor use only.


TRIM INSTALLATION:

1 Hole Cutout Size

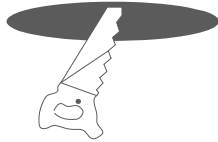


Ø 2-7/8"


2 Remove the knockout on the junction box and attach Romex connector to junction box.

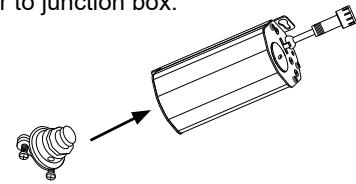


3 Open the drive door and connect supply wiring as shown below. Close cover.

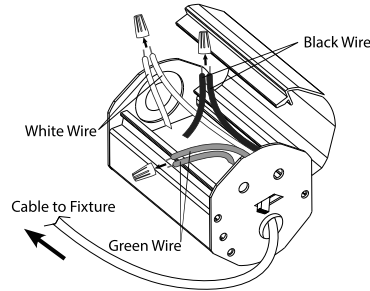


4 Select CCT by setting switch on the end of the driver to the desired setting.

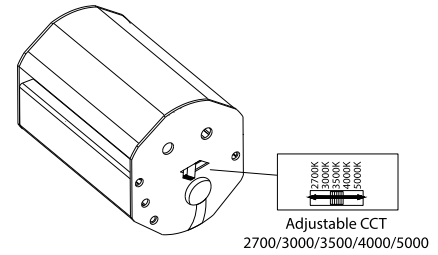


5 Insert driver into mounting hole, leaving fixture cable exposed.

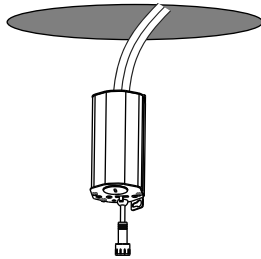


6 Twistlock the desired trim onto the light engine.

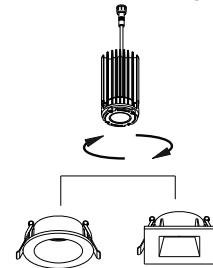

7 Connect light engine to driver by inserting and twisting the connectors.

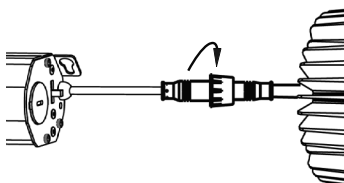


8 Insert the light engine into the ceiling by pressing the clips upwards. Insert the light engine into the mounting hold and release the clips.

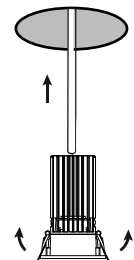

9 Turn power on and confirm fixture is working properly.


TRIMLESS INSTALLATION:

1 Hole Cutout Size

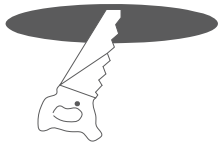


Round: \varnothing 2-7/8"
Square: 2-7/8" x 2-7/8"


2 Align the edge of the mud ring trim to the drywall hole and screw into place. Note: install with arrow up.

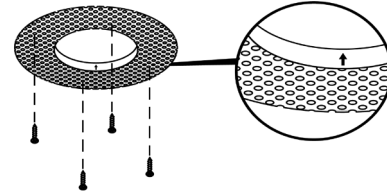


3 Plaster over mud ring trim, be careful not to fill past the raised rim.

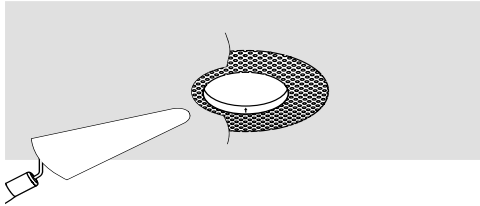


4 Remove the knockout on the junction box and attach Romex connector to junction box.

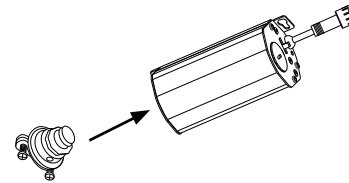


5 Open the drive door and connect supply wiring as shown below. Close cover.

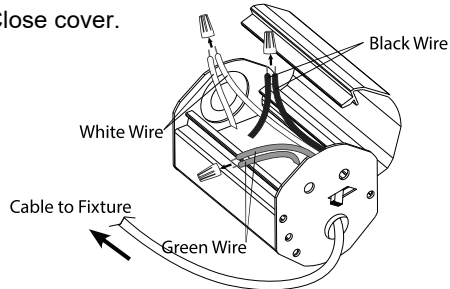


6 Select CCT by setting switch on the end of the driver to the desired setting.

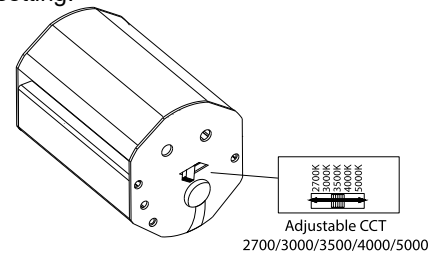


7 Attach the reflector to the light engine by aligning and twist to lock into place.

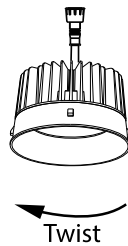

8 Connect light engine to driver by inserting and twisting the connectors.

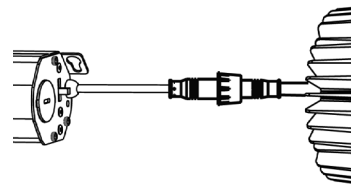

9 Insert the driver through the mud ring trim. Insert the fixture into the mud ring trim and twist to lock into place.

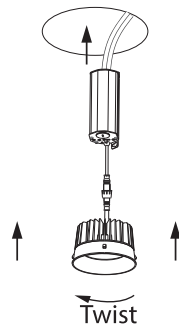

10 Turn power on and confirm fixture is working properly.